



Drill a hole in the uprights 250mm from the top. Cut a 30° angle in each base.

2 Lay two uprights on a flat surface, with the inside face upwards, mark 20mm up from the bottom. Clamp the brace and drill a hole through the brace and upright. Repeat for the other side.

Assemble the tent frame; the base of the uprights should be about 1500mm apart. Lay the centre strut in the 'V' of the uprights. Mark a cut-out where it crosses each outside upright. Using a hand saw and chisel create the cut-out at each end.

A Sand, undercoat and paint the pieces.
I used Resene Quick Dry Primer and
Resene Lustacryl semi-gloss waterborne
enamel in Daredevil.

5 Cut one piece of fabric 3560mm long; fold in half. Create a pocket across the width by sewing a seam 50mm from the top. At the bottom fold under 20mm and fold again to create a 60mm pocket; stitch.

For the back, lay the uprights over the fabric, mark the shape, add a seam allowance and cut out. Attach to the sides as far as the stitch line for the bottom pocket. Hem and turn in the lower side. Repeat for the front using two pieces of net fabric attached to the triangular fabric top as shown.

Cut ribbon into 4 x 60cm and 4 x 40cm. Stitch the centre of the 60cm lengths along the seam lines front and back 90cm down from the top. Add the ribbons to tie the front flaps.

Assemble by feeding the centre strut through the top pocket and the side braces though the lower pockets. Put the frame together using the 60mm gutter bolts at the top of the uprights. Place the centre strut between the Vs with the cut-outs sitting over the outer uprights. Pull the side braces out to the width of the fabric using the 50mm gutter bolts and attach at each end. Tie the ribbons over the frame to secure.

PHOTOS: ROSE HUGHES