Screen time

Hide untidy corners with a trellis garden screen that can be removed for easy access.

You will need:

- 2 panels of expandable trellising (expanded to width and height required)
- Tanalised wood for frame (length required x 45mm x 20mm)
- 4 slats from old wooden
- blind, or similar
- Resene Lumbersider satin acrylic paint tinted to Alabaster
- Resene Lumbersider satin acrylic paint tinted to Porsche
- Resene Enamacryl
- Metallic paint in **Bullion**
- 4 square hooks and eyes
- Staple gun • Frost cloth
- Nails
- Hammer, pliers, drill
- Paint brushes



For more on paints phone o8oo RESENE or visit www.resene.co.nz







SPACES beneath decks are dumping grounds for old pots, bags of compost and wheelbarrows. A removable screen will cover the mess and allow for easy access.



MAKE two frames with the tanalised wood to the size of each panel of trellising, and fix with



EXPAND the trellising to fit the frames and place on top, with the back showing. Note: any type of trellising can be used, cut to the required size.



NAIL the trellising to the frames, leaving plenty of room around the frames for the wooden slats and frost cloth to be stapled.



SCREW two eyes to the top of each frame. A simple hook and eve system allows for easy removal of the frames – one or two frames at a time.



DRILL holes into the side of the deck at corresponding lengths to the eyes and screw the hooks into the holes, using pliers if necessary.



PAINT trellis with Resene Lumbersider in Alabaster. Paint the frame with a basecoat of Resene Lumbersider in Porsche, then a topcoat of Resene Enamacryl Metallic in Bullion.



LAY the frost cloth over the back of the trellis, place a wooden slat on the top and bottom ends of the frame, and staple in place. Cut away excess cloth.