


build a **barbecue bench**

Outdoor kitchens are all the rage. This one brings industrial chic – and practicality – to any garden.

You will need:

- Welding materials (including a mig welder and compressor), or a pre-made frame, or build one out of timber
- Sheet of 25mm or 32mm plywood (we used 32mm)
- Sink we used an Aquatica Mega 240
- Tap we used an Aquatica Forte sink mixer (made for indoor use but fine if reasonably protected)
- Skill saw

- Measuring tape and square edge
- Jigsaw
- Drill with hole bit
- Screw driver and screws
- Electric planer
- Sander and sandpaper
- Sealant to secure sink
- One litre of Resene Woodsman Wood Oil Stain tinted to Resene Driftwood
- Safety gear

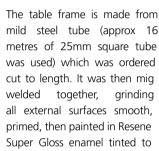



Resene Black. The frame can be made by a DIY enthusiast, or ordered readymade. Or, make a simple timber frame.

Step 1

Cut the plywood to fit the frame leaving an overhang all around. We used the full length of 2.4m then cut it to 620mm wide. Use the remaining width of plywood for the bottom shelf, cutting the length to fit. We left a space for a cupboard or rubbish bin at the end.

Step 2

Drill and screw the top to the frame. Attach the shelf.

Step 3

Measure and cut the hole for the sink, using the jigsaw. Measure and cut hole for the tap.

Step 4

Plane the edges if necessary, then sand with an electric sander and/or a sanding block.

Step 5

Before fitting the sink and tap, stain the plywood with Resene Woodsman Wood Oil Stain as directed on the tin. Silicon the sink into the benchtop, and fix the tap in place.

pictures Frances Oliver

