

# GARDEN ART PANEL

## YOU WILL NEED

- 19mm galvanised nails
- 75mm galvanised nails
- A piece of 6mm treated plywood
- Treated timber to make a backing frame (ours measured approximately 25mm x 50mm)
  - Clean cloth
- Drill with 3mm drill bit
  - Hammer
- Low-tack masking tape
  - Paintbrush
- Pencil • PVA glue
- Resene Quick Dry
- Resene testpots of Resene Alabaster, Resene All Black, Resene Chaos, Resene Fizz, and Resene Resolution Blue
- Sandpaper • Saw • Set square

## TO GET THE LOOK

Mark painted the background shed wall with Resene Lumbersider tinted to Resene Soft Apple.

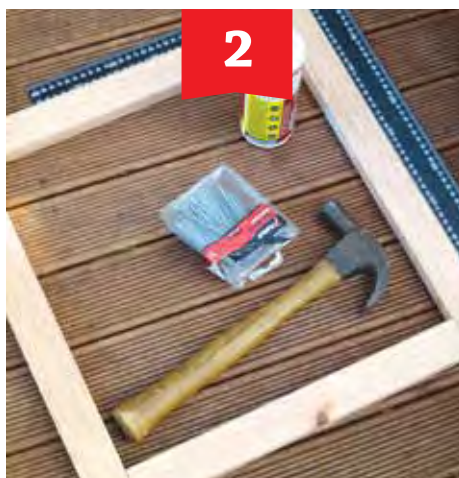
Approximate height (h) and width (w) dimensions of the coloured rectangles, moving clockwise around the panel:

- Yellow – 230mm (h) x 150mm (w)
- Red – 380mm (h) x 330mm (w)
- White – 100mm (h) x 330mm (w)
- Blue – 100mm (h) x 150mm (w)
- White – 150mm (h) x 150mm (w)


**1**

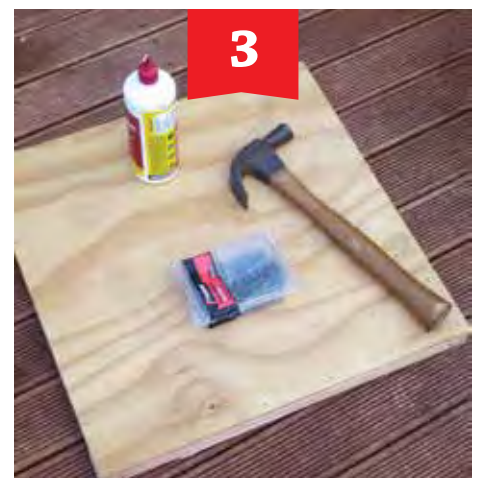
### STEP ONE

Measure, mark and cut the plywood to form a square 480mm x 480mm. Cut the treated timber to make a backing frame measuring 480mm x 480mm. Smooth any rough edges with sandpaper.


**2**

### STEP TWO

On a flat surface, assemble the pieces of timber to form a square frame. Fix the timber at each corner with PVA glue and 75mm galvanised nails (drilling pilot holes first). Allow glue to dry.


**3**

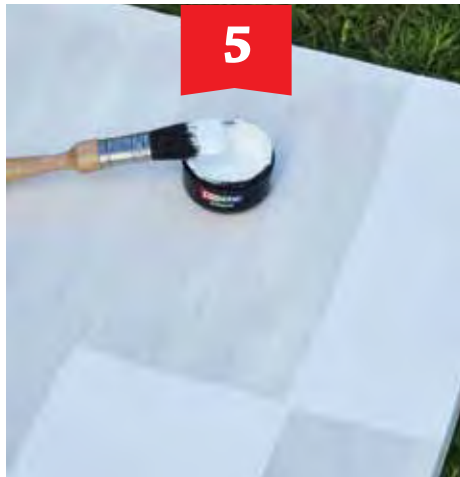
### STEP THREE

Fix the plywood to the backing frame with PVA glue and 19mm galvanised nails. Allow glue to dry.



### STEP FOUR

Apply one coat of Resene Quick Dry to the entire panel and allow two hours to dry. Use the set square and a pencil to measure out and mark the coloured rectangles to dimensions provided.



### STEP FIVE

Paint the rectangles. Each rectangle requires two coats of paint with a drying time of two hours between coats. Paint the two white rectangles with Resene Alabaster.



### STEP FIVE

Paint the blue rectangle with Resene Resolution Blue.



### STEP FOUR

Paint the yellow rectangle with Resene Fizz.



### STEP FIVE

Paint the red rectangle with Resene Chaos.



### STEP SIX

Paint the back and side edges of the panel with two coats of Resene All Black, allowing two hours for each coat to dry. Mask off a 20mm 'frame' around the edge of the panel and apply two coats of Resene All Black. Remove the masking tape.



### STEP SEVEN

Mask off 20mm lines between the coloured squares, as shown.



### STEP EIGHT

Apply two coats of Resene All Black to the masked-off lines. Remove the masking tape.

## TOP TIP

To prevent paint damage, carefully remove the masking tape before the second coat of paint dries.



the paint the professionals use

For more on paints phone  
0800 RESENE (0800 737 363)  
or visit your Resene ColorShop or  
[www.resene.co.nz](http://www.resene.co.nz)