

#### MATERIALS

- timber cut to the following lengths:
- » 4 x 1150mm

- 2400mm x 1200mm x 12mm plywood panel (for the sides)
- weatherproof canvas
- 8m of 40mm x 18mm pine trim
- 30mm x 1.6mm nails
- Contact adhesive spray
- Nail filler
- undercoat
- Resene Lustacryl enamel paint, in your choice of colour (we


#### TOOLS

- Craft knife
- Drop saw
- Hammer
- Paint roller and tray

- · Tape measure







# • 90mm x 45mm framing

- » 4 x 750mm
- » 8 x 220mm
- » 8 x 310mm
- 1200mm x 1200mm x 18mm plywood panel (for the seat top)
- 3m of 120cm-wide

- 150mm screws

- Resene Quick Dry waterborne primer
- semi-gloss waterborne used Resene Rice Cake)
- Single foam mattress with the cover removed

- Circular saw
- Clamps

- Impact driver
- Pencil
- Putty knife
- Sandpaper
- Scissors
- Staple gun



Place the second rectangular frame on top to create a box, then screw together.

**STEP ONE** 

identical frame.

**STEP TWO** 

as shown.

STEP THREE

Arrange two 1150mm and

310mm lengths of timber into a

and repeat to create a second

Place one frame on the ground

timber to each corner, vertically

and screw a 220mm length of



Repeat the first step with the 750mm and 310mm timber rectangle and clamp together, as lengths to create two smaller shown. Screw the frame together rectangle frames.

#### STEP FIVE


Attach one of these to the base of the box, creating an L shape.

#### **STEP SIX**

Once again add the four 220mm vertical supports and top with the second rectangle to create a box, as shown.

#### **STEP SEVEN**

Accurately measure each of the

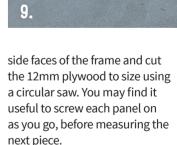

#### STEP EIGHT

If you haven't already, screw the panels in place.

#### **STEP NINE**

Add the pine trim. We found it easiest to measure, cut and nail every length one by one, starting with the horizontal lengths on all faces and then fitting in each vertical length.









### Herés another idea

You could also use this guide to create a bench seat to be placed indoors in a dining nook or entryway.

















## the paint the professionals use

For more on paints and stains phone 0800 RESENE (0800 737 363) or visit your Resene ColorShop resene.co.nz/colorshops

#### **STEP TEN**

Fill in all the nail holes along the trim and allow the filler to dry.

#### STEP ELEVEN

Measure the top of your bench seat (including trim) and cut the 18mm plywood to size. Avoid cutting an L shape; instead, cut two rectangles to follow the shape of the original two boxes.

#### **STEP TWELVE**

Place the two rectangular plywood panels onto the foam and use the edges as a guide to cut the foam to size.

#### **STEP THIRTEEN**

Spray contact adhesive onto one side of each of the plywood panels and carefully place the foam into position, aligning each edge.

#### **STEP FOURTEEN**

Using the cushion seats as a guide, cut the weatherproof canvas fabric to size, allowing approx. 20cm along each side to be folded over.

#### **STEP FIFTEEN**

Lay the canvas fabric out, place one cushion seat on top

(plywood side up) and then wrap the cushion like a present using the staple gun, remembering to pull the fabric tight with each side so there are no wrinkles. Pay close attention to the corners so the fabric folds neatly.

#### **STEP SIXTEEN**

Sand down the dried nail filler on the bench.

#### STEP SEVENTEEN

Apply a coat of Resene Quick Dry waterborne primer undercoat to all faces of the box, including the inside, and allow to dry.

#### **STEP EIGHTEEN**

Apply two coats of Resene Lustacryl semi-gloss waterborne enamel paint tinted to Resene Rice Cake to the bench, allowing each coat to dry.

#### **STEP NINETEEN**

Move your bench seat into position, fill it with gardening tools, cushions or anything else you want to keep dry, and place the cushioned seats on top. Sit back, relax and admire your handiwork!