


Paint Effects

Crackling

Crackling is an aging technique that cracks the topcoat of paint exposing the paint underneath. The size of the cracks produced depends on the application method and thickness of the paint applied on top. The heavier the application, the larger the cracks will be.

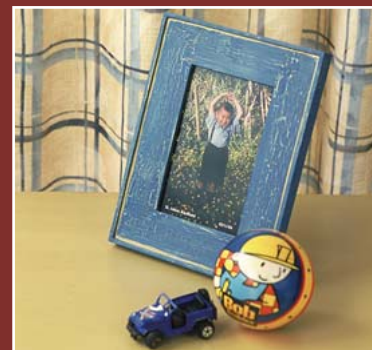

You will need:

- 25mm nylon artist brush
- Furniture wax, tinted
- Liner brush
- Picture frame
- Resene Crackle Effect
- Resene Enamacryl Metallic tinted to Resene Gold
- Resene Qristal Clear Poly-Flat
- Resene testpots in Resene Breakwater and Resene Golden Sand

Tips:

A plain frame suits this finish, so the less detail the better.

Before you start your project try out different combinations and practice your application method on a piece of card until you are happy with the result.

See the Resene Paint Effects brochure for a range of paint effects samples or visit the Resene website for more Paint Effects ideas - www.resene.co.nz/homeown/use_colr/paint_effects.htm (NZ) or www.resene.com.au/homeown/use_colr/paint_effects.htm (AUST).

Resene Paint Effects brochures are available free from Resene ColorShops or order your copy online from www.resene.co.nz/comn/whtsnew/colrordr/order.htm (NZ) or www.resene.com.au/comn/whtsnew/colrordr/order.htm (AUST).

Method:

1. Apply one coat of Resene Golden Sand and allow to thoroughly dry.



2. Brush on a smooth even coat of Resene Crackle Effect. Allow to dry.



3. Fairly quickly, brush on one coat of Resene Breakwater. Apply in one direction following the grain of the wood around the frame. As the paint dries, the cracks will form. This happens quite quickly. Don't touch the paint once it has crackled otherwise you will damage the finish.



4. This step is optional. Using the liner brush and the gold paint, paint a fine line around the frame. Two or three coats may be necessary.



5. Seal with Resene Qristal Clear. To antique it further, tinted furniture wax can be rubbed in and buffed gently when dry.

In New Zealand:

32-50 Vogel Street, Lower Hutt,
PO Box 38-242, Wellington Mail Centre
Call 0800 RESENE, visit www.resene.co.nz
or email us at advice@resene.co.nz

In Australia:

PO Box 785, Ashmore City, Queensland 4214
Call 1800 738 383, visit www.resene.com.au
or email us at advice@resene.com.au

Project by Janet Scard
Photography by Joseph Zou

Resene

the paint the professionals use