

★☆☆ Difficulty level ★★ easy ★★★ moderate ★★★★★ challenging

Ways with wood  
with Mark Rayner – 36

Turn a plain wooden box into a simple stylish storage solution using Resene Waterborne Colorwood woodstain.

### You will need:

- Clean lint-free cloth
- Damp cloth
- Latex glove
- Paintbrush
- Resene Aquaclear satin
- Resene Waterborne Colorwood testpot of Resene Hibiscus (x2)
- Sandpaper
- Wooden storage box (ours came from 'Briscoes')




**Step one**  
Lightly sand the box and wipe off any sanding dust with slightly damp cloth. Allow to dry.



**Step two**  
Apply one coat of Resene Hibiscus to the base of the box, brushing evenly in the direction of the grain, as shown.




**Step three**  
Leave the Resene Waterborne Colorwood to soak into the wood for up to 15 minutes and then wipe off any excess Resene Waterborne Colorwood with a clean lint-free cloth.

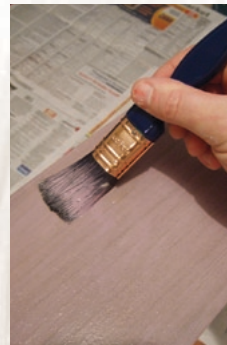


**Step four**  
Repeat steps 2 and 3, applying Resene Waterborne Colorwood to the outer sides of the box.




**Step five**  
Repeat steps 2 and 3, applying Resene Waterborne Colorwood to the base of the box.

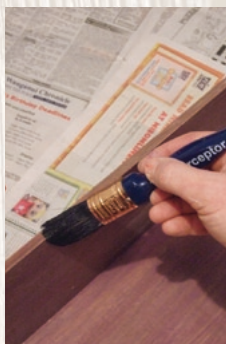

**Step six**  
Repeat steps 2 and 3, applying Resene Waterborne Colorwood to the rim and inner sides of the box. Leave to dry for 48 hours.

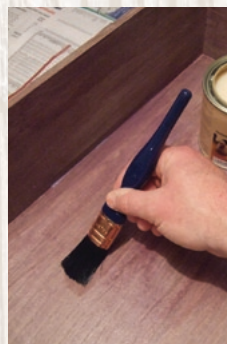

**Step seven**  
Apply one coat of Resene Aquaclear satin to the base, rim and inner sides of the box and allow two hours to dry.

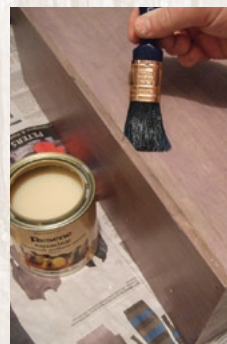


**Step eight**  
Apply one coat of Resene Aquaclear satin to the outer sides and base of the box and allow two hours to dry. Apply two further coats of Resene Aquaclear satin to the entire box, allowing two hours for each coat to dry.



### To get the look:

Mark painted the background wall with Resene SpaceCote Flat tinted to Resene Texas Rose.

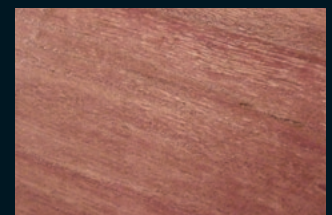

### Other ideas:

For a paler, limewash effect use testpots of Resene Waterborne Colorwood in Resene Egg White.

For more ideas and inspiration visit your local Resene ColorShop or the Resene website.