

★☆☆ Difficulty level ★ easy ★★ moderate ★★★ challenging

Weekend DIY with Mark Rayner – 7

You will need:

- Clean cloth
- Paintbrush
- Potting mix
- Plastic plant pot
- Resene Multishield+ gloss
- Resene Sandtex Mediterranean effect
- Resene Waterborne Smooth Surface Sealer
- Resene testpots of Resene Bullion and Resene Porsche
- Resene testpot roller and tray
- Sandpaper
- Small stick for stirring
- Small succulent




Step one

Lightly sand the outside of the plastic plant pot to 'key' the surface and wipe off any sanding residue with a clean cloth.



Step two

Apply one coat of Resene Waterborne Smooth Surface Sealer to the outside and inner rim of the pot and allow to dry for two hours.

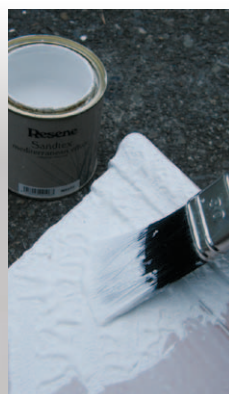

Step three

Apply one coat of Resene Sandtex Mediterranean effect to the outside and inner rim of the pot, dabbing the paint to create a textured surface. Allow to dry.



Step four

Paint the outside and inner rim of the pot with one coat of Resene Porsche and allow two hours to dry.




Step five

Carefully stir the Resene Bullion using a small wooden stick.



Step six

Apply two coats of Resene Bullion to the outside and inner rim of the pot using a Resene testpot roller and tray. Allow two hours for each coat to dry.

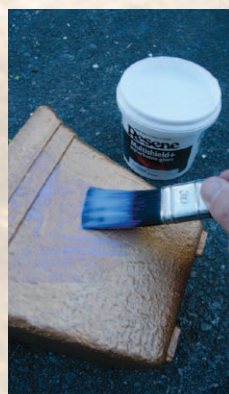

Step seven

Apply one coat of Resene Multishield+ gloss to the outside and inner rim of the pot and allow two hours to dry.



Step eight

Pot up with good quality potting mix and a small growing succulent.

Create this fabulous gold succulent pot using Resene Sandtex and a few Resene testpots.



Top tip:

Mark painted the background stucco wall with Resene Lumbersider tinted to Resene Oyster Bay.



Other ideas:

For a rich metallic pink effect try Resene Bedazzle over a basecoat of Resene Rouge.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.co.nz or www.resene.com.au.

Check out our special Artists section online www.resene.co.nz/artists/artists_canvas.htm or www.resene.com.au/artists/artists_canvas.htm.