

You will need:

- Clean cloth
- Galvanised watering can
- Paint stirrer
- Paintbrush
- Potted colour (we used white chrysanthemums)
- Resene Galvo-Prime
- Resene Lumbersider tinted to Resene Spritzer
- Sandpaper



Step one
Lightly sand the watering can to 'key' the surface.



Step two
Wipe off any sanding residue with a clean cloth.



Step three
Carefully stir the Resene Galvo-Prime.



Step four
Apply one coat of Resene Galvo-Prime to the outside of the watering can and allow to dry.



Step five
Carefully stir the Resene Lumbersider tinted to Resene Spritzer.




Step six
Apply one coat of Resene Lumbersider tinted to Resene Spritzer to the outside of the watering can and allow to dry.



Step seven
Apply a second coat of Resene Lumbersider tinted to Resene Spritzer to the outside of the watering can and allow to dry.



Step eight
Place the potted colour in the watering can.

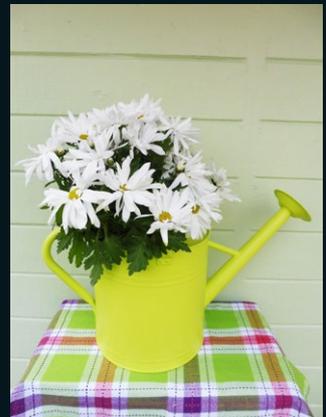

To get the look:
Mark painted the background summerhouse wall with Resene Lumbersider tinted to Resene Soft Apple.



Other ideas:
For a rich red effect paint the watering can with Resene Lumbersider tinted to Resene Poppy.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out our special Artists' section online www.resene.com/artists.