

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging Fun with furniture with Mark Rayner – 23


You will need:

- Clean cloths
- Latex glove
- Paintbrush
- Paint stirrer
- Resene Danska Teak Oil
- Resene Mineral Turpentine
- Sandpaper
- Unpainted wooden cabinet



Step one

Lightly sand the cabinet in the direction of the wood grain, beginning with a medium grade sandpaper and finishing with a fine grade sandpaper.

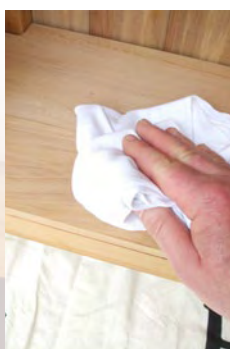

Step two

Wipe off any sanding dust with a clean cloth.




Step three

Stir the Resene Danska Teak Oil.




Step four

Turn the cabinet upside down and apply one coat of Resene Danska Teak Oil to the underside of the cabinet, brushing in the direction of the grain.

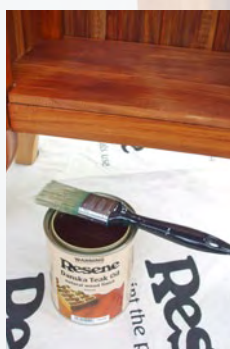

Step five

Turn the cabinet the right way up and continue to apply the Resene Danska Teak Oil to the rest of the cabinet.

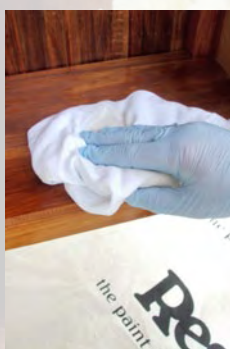

Step six

Wearing a latex glove, carefully wipe off any excess Resene Danska Teak Oil using clean dry cloths. Allow to dry for 24 hours.



Step seven

Wash brush in Resene Mineral Turpentine.



Step eight


For safety reasons, wet the cloths thoroughly and wring out before disposing in the rubbish.

Give a plain wooden cabinet an instant transformation using Resene Danska Teak Oil.



To get the look:

Mark painted the background wall with Resene SpaceCote Flat tinted to Resene Silver Chalice.

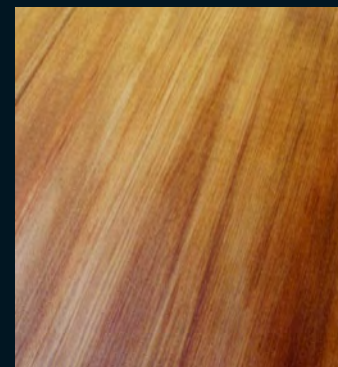

Other ideas:

Use Resene Danska Teak Oil on plain plywood shelving to create a cool contemporary look.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.co.nz or www.resene.com.au.

Check out our special Artists section online www.resene.co.nz/artists/artists_canvas.htm or www.resene.com.au/artists/artists_canvas.htm.