

★★★ Difficulty level ★ easy ★★ moderate ★★★ challenging

Ways with wood
with Mark Rayner – 88

You will need:

- 75mm exterior screws
- Mineral turpentine
- Paint stirrer
- Paintbrush
- Pencil
- Resene Paint Pot
- Resene Woodsman wood oil stain tinted to Resene Totem Pole
- Sandpaper
- Saw
- Screwdriver
- Set square
- Tape measure
- Tongue and groove landscaping timber (approx 14m)



Step one

Measure, mark and cut fourteen lengths of landscaping timber, each measuring one metre. Smooth any rough edges with sandpaper.



Step two

Assemble four of these lengths of timber to form a rectangular frame, as shown, using a set square to ensure corners are at ninety degrees. Fix together with 75mm screws.



Step three

Place four more lengths of timber on top of the first frame, as shown, to create a second layer. Again, fix together with 75mm screws.



Step four

Place the six remaining lengths of timber across the base, as shown. Once again, fix with 75mm screws.




Step five

Carefully stir the Resene Woodsman wood oil stain tinted to Resene Totem Pole.



Step six

Apply one coat of Resene Woodsman wood oil stain tinted to Resene Totem Pole to the garden seat and allow 24 hours to dry.

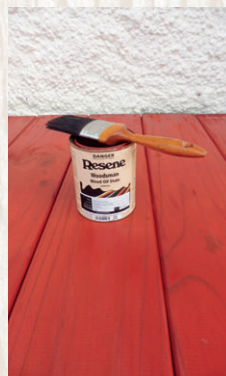

Step seven

Apply a second coat of Resene Woodsman wood oil stain tinted to Resene Totem Pole to the garden seat and allow 24 hours to dry.



Step eight

Wash brush in mineral turpentine.



To get the look:
Mark painted the background wall with Resene AquaShield tinted to Resene Quarter Dutch White.



Other ideas:
For a rich green effect stain the garden seat with Resene Woodsman wood oil stain tinted to Resene Rangitoto.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.com/colorshops.

Check out more project ideas online www.resene.com/projects.