


You will need:

- 20mm piece of plywood measuring 300mm x 150mm
- Cup hooks (x3)
- Masking tape
- Paintbrushes (including artists' brush)
- Pencil
- Resene Multishield+ gloss
- Resene Quick Dry
- Resene testpots in the following colours: Resene Broom, Resene Elvis and Resene Jordy Blue
- Ruler
- Sandpaper
- Saw



Step one

Measure, mark and cut the piece of plywood to the dimensions listed above. Smooth any rough edges with sandpaper.

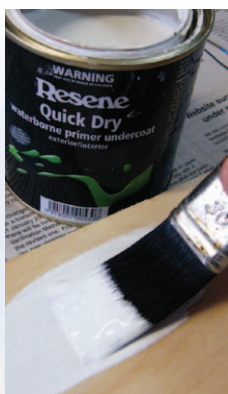

Step two

Apply one coat of Resene Quick Dry to the plywood panel and allow two hours to dry.



Step three

Paint the front of the panel with two coats of Resene Broom, allowing two hours for each coat to dry.



Step four

Measure and mask a 25mm strip around the edges of the panel.



Step five

Apply two coats of Resene Elvis to the masked off edges, allowing two hours for each coat to dry. Remove the masking tape before the second coat has dried.



Step six

Paint a large key shape, as shown, using two coats of Resene Jordy Blue. Allow two hours for each coat to dry.



Step seven

Apply one coat of Resene Multishield+ gloss to the panel and allow two hours to dry.



Step eight


Fix three cup hooks down the centre of the panel, as shown.

It's easy to create this handy key hanger from plywood, cup hooks and a few Resene testpots.



Top tip:

Mark painted the background wall with Resene SpaceCote Flat tinted to Resene Black White.

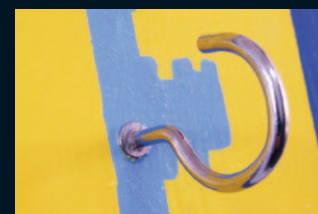

Other ideas:

For a monochrome grey effect use Resene Rice Cake, Resene Tuna and Resene White Pointer.

For more ideas and inspiration visit your local Resene ColorShop or www.resene.co.nz or www.resene.com.au.

Check out our special Artists section online www.resene.co.nz/artists/artists_canvas.htm or www.resene.com.au/artists/artists_canvas.htm.